# RGB/CCT/Dimming 3 Channel LED RF Controller

Model No.: V3-L

3 Channels / Step-less dimming / Wireless remote control / Push Dim / Auto-transmitting / Synchronize



FC C (E RoHS emc RED

## **Features**

- Match with Skydance's 2.4G single color, dual color and RGB/RGBW remote control.
- One RF controller accept up to 10 remote control.
- When using with RGB light, built in 10 dynamic mode, include jump or gradual change style.
- Auto-transmitting function: Controller automaticly transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.
- Connect with external push switch to achieve on/off and dimming function.

## **Technical Parameters**

Input and Output		
Input voltage	12-36VDC	
Input current	18.5A	
Output voltage	3 x (12-36)VDC	
Output current	3CH,6A/CH	
Output power	3 x (72-216)W	
Output type	Constant voltage	

Safety and EMC		
EMC standard (EMC)	EN301 489,EN 62479	
Safety standard(LVD)	EN60950	
Radio Equipment(RED)	EN300 328	
Certification	CE,EMC,LVD,RED	


Dimming data	
Input signal	RF 2.4GHz + Push Dim
Control distance	30m
Dimming level	4096 levels
Dimming range	0 - 1 00%

 
Environment	
Operation temperature	Ta:-30°C~+55°C
Case temperature (Max.)	Tc: +85°C
IP rating	IP20

Warranty and Protection		
Warranty	5 years	
Protection	Reverse Polarity	

User Manual Ver 1.0.3


# Mechanical Structures and Installations

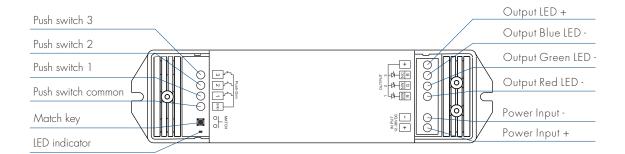




# Wiring Diagram

• V3-L for RGB

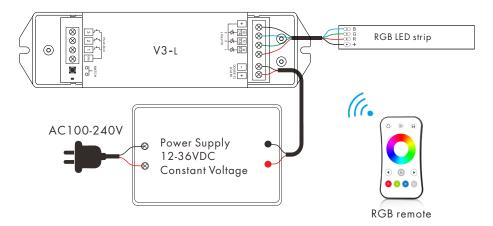


• V3-L for dual color

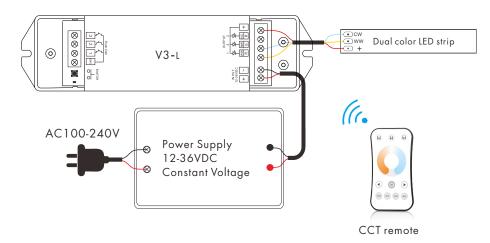


User Manual Ver 1.0.3 Page 2

## • V3-L for single color

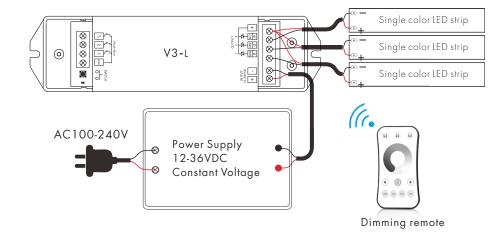

# • V3-L with three push switch for 3 channel single color

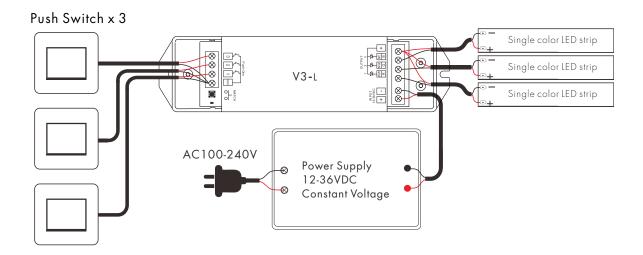

# Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

#### Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.0.3 Page 3

# Push Dim Function

### • Short press:

Turn on or off each channel.


## • Long press (1-6s):

Press and hold to step-less dimming of each channel, With every other long press, the light level goes to the opposite direction.

### • Dimming memory:

Light returns to the previous dimming level when switched off and on again, even at power failure.

# Dimming Curve

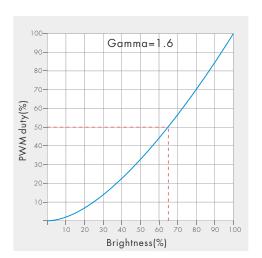

# RGB dynamic mode list

No.	Name	No.	Name
1	1 RGB jump		RGB fade in and out
2	2 RGB smooth		Red fade in and out
3	6 color jump	8	Green fade in and out
4	4 6 color smooth		Blue fade in and out
5	Yellow cyan purple smooth	10	White fade in and out

# Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	<ol> <li>No power.</li> <li>Wrong connection or insecure.</li> </ol>	Check the power.     Check the connection.
Wrong color	1. Wrong connection of R/G/B wires.	1. Reconnect R/G/B wires.
Uneven intensity between front and rear, with voltage drop	<ol> <li>Output cable is too long.</li> <li>Wire diameter is too small.</li> <li>Overload beyond power supply capability.</li> <li>Overload beyond controller capability.</li> </ol>	<ol> <li>Reduce cable or loop supply.</li> <li>Change wider wire.</li> <li>Replace higher power supply.</li> <li>Add power repeater.</li> </ol>
No response from the remote	<ol> <li>The battery has no power.</li> <li>Beyond controllable distance.</li> <li>The controller did not match the remote.</li> </ol>	<ol> <li>Replace battery.</li> <li>Reduce remote distance.</li> <li>Re-match the remote.</li> </ol>

User Manual Ver 1.0.3 Page 4